

 
 
 
swift


Instructions for use and assembly

 **GESSLEIN**
We give everything for your child.



www.gesslein.de



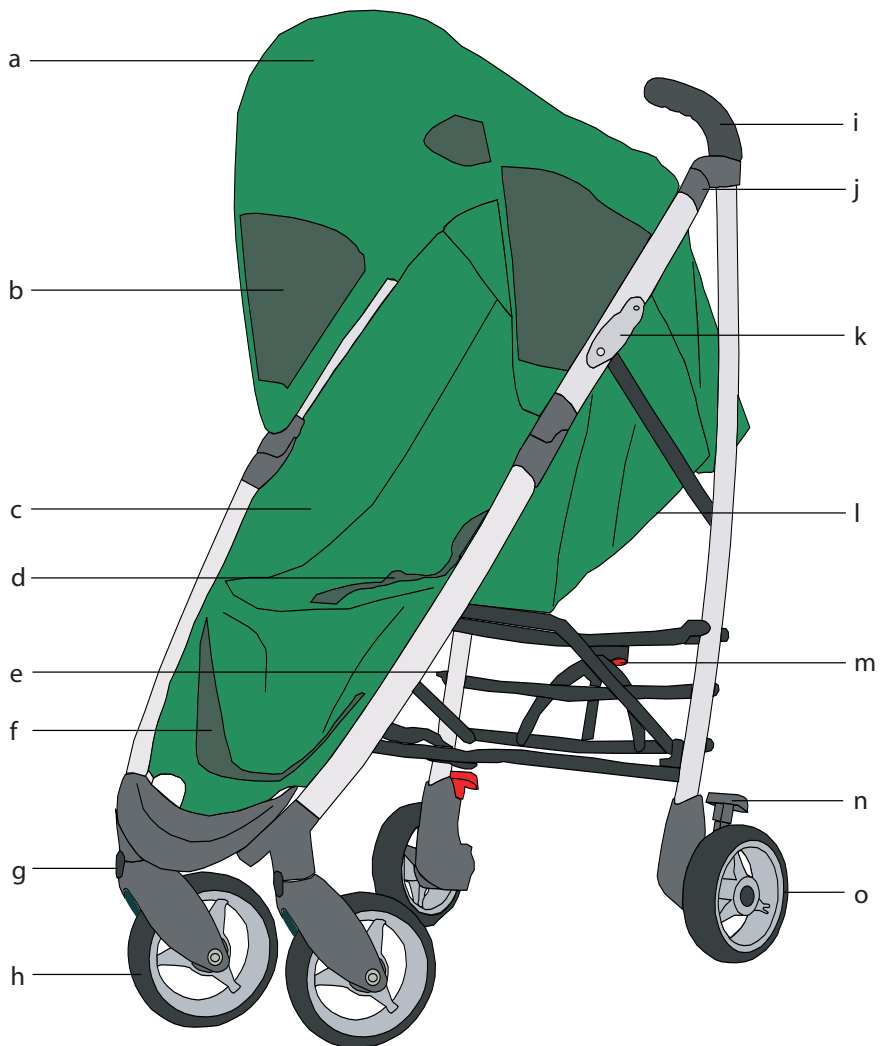

Key

- | | | |
|---|--------------------------------|------------------------|
| a. Hood | f. Foot support | l. Backrest adjustment |
| b. Viewing window | g. Swivel wheel locking device | m. Release button |
| c. Removable seat | h. Front wheel | n. Parking brake |
| d. Safety harness with five anchor points | i. Pushing handle | o. Rear wheel |
| e. Foot lever | j. Cover endclip | |
| | k. Transit lock | |

Thank you!

We at Gesslein would like to say thank you for the confidence you have placed in us and our products by buying this article.

For us as a family firm you, the customer, come first. Naturally we are constantly striving to ensure that the product is impeccable. Please bear in mind that in the case of a pram, we are dealing with a utility article which must be appropriately looked after and maintained. In order that you continue to be delighted with your purchase for a good long time, **please read through our "safety instructions", the "operating instructions" and the "general instructions for use and maintenance" carefully before you use the product for the first time and keep them in a safe place for future reference.**

The safety of your child may be adversely affected if you fail to follow the warnings, advice and instructions for use.

At the end of the "Instructions for Use" you will find a Handover Checklist. Please make sure that you receive the completed checklist from the dealer. All information relating to the particular model must be entered on this form; this will make the procedure easier for you in the case of a warranty claim or when ordering spare parts or accessories.

» Please understand that you cannot make valid warranty claims without the completed checklist and the purchase receipt.

General advice

- The Swift is suitable for children from birth to four years of age (maximum weight 25 kg).
- Only ever use the Swift for one child.
- Ensure that the Swift is fully opened out/up? and that all locking devices are correctly engaged before placing your child in the buggy.
- Always use the parking brake when parking the buggy even if you are stopping for a short time.
- It is recommended that the Swift should not be used until the child is able to sit up unaided, generally 6 months after birth.
- The buggy seat should not be used for children under the age of 6 months.
- Never pick up the Swift with a child sitting in it and do not use escalators when a child is in the buggy.
- Use only original accessories and spare parts approved by the manufacturer.
- Keep your child well away from moving parts when folding up, unfolding or making an adjustment to the buggy.
- Plastic packaging material must be kept out of reach of children because of the danger of suffocation.
- Inspect and clean the SWIFT regularly. Do not use any abrasive detergents or lubricants.
- Do not undertake any alterations to the product. Please refer any complaints or problems to your specialist dealer or importer
- The SWIFT has been tested and approved/licensed in accordance with NFS 54-001, EN 1888:2003, ES 7409:1996


IMPORTANT! Please read before use!

- **CAUTION!** Read through the, " instructions for use", carefully and keep them for future reference. If you do not follow the , " instructions for use", you may put your child's safety considerably at risk.
- **CAUTION!** You alone are responsible for the safety of your child.
- **CAUTION!** Always put on the buggy parking brake. Never leave your child in the buggy without supervision.
- **CAUTION!** Check each time you use the buggy that the locking mechanisms are fully engaged in order to avoid anything getting caught in them.
- **CAUTION!** Everything that you hang from the pushing handles reduces the stability of the buggy and increases the danger that it will tip over.
- **CAUTION!** Always strap your child in with the safety harness and always use the strap between the legs together with the lap belt and the shoulder straps, even if you are using the footmuff.
- **CAUTION!** Pay attention to small objects such as the wheel valve caps; your child could swallow them and be in danger of choking.
- **CAUTION!** You cannot use this product while jogging or inline skating.
- **CAUTION!** Always check that the carry cot, the adapter, the safety car seat and the SWIFT seat are correctly installed and secured before use.
- **CAUTION!** The tyres may leave black streaks on some types of flooring
(especially on smooth flooring such as parquet, laminated plastic, linoleum etc.)

1. Preparing the SWIFT for use

»Fitting the front wheels on the chassis:

(1) Push the shaft of the front wheel into the chassis until you hear a click as it locks in place.

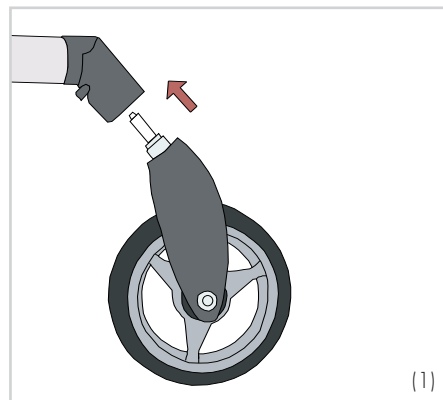


»Unfolding the SWIFT:

(k) Release the transit lock on the left-hand side.

(i) Lift up the SWIFT by the pushing handles and the chassis will unfold of its own accord.

(2) Press the lower strut with your hand or foot until it is level.


The SWIFT is ready for use.

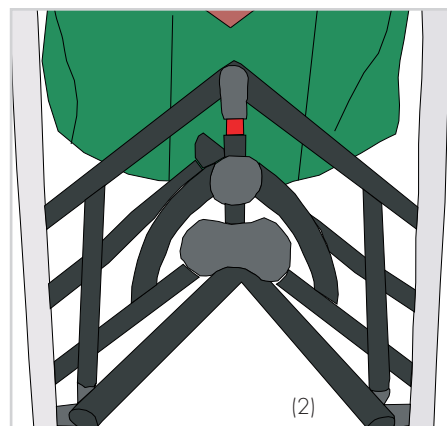

»The parking brake:

Always use the parking brake when you stop, even for a short period.


(3) Press the red pedal down to put on the brake. Press the other pedal down to release the brake.

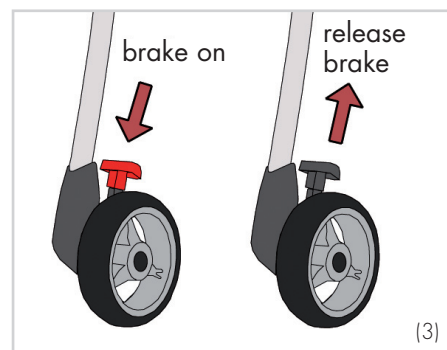

2. Using the SWIFT

»SWIFT buggy seat:


The SWIFT buggy seat is suitable for children from 6 months to 4 years old (maximum 25 kg). Use the buggy seat for a child that can already sit up on its own.

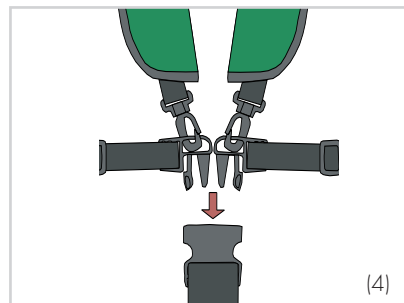

»Placing the child in the SWIFT:


Put on the buggy parking brake and make sure that the safety harness is unfastened before you place the child in the seat.

(4) Push the catches into one another and secure the strap between the legs to the lap belt and shoulder straps by clicking the catches into the belt lock.

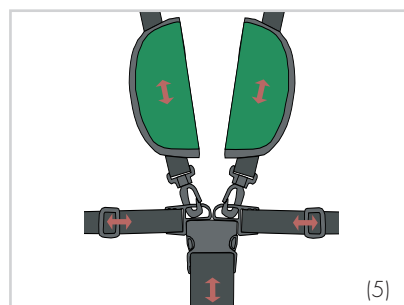

(5) Depending on the child's size, adjust the belts by shortening or lengthening them using the buckles.

(6) Press both buttons to release the lock.

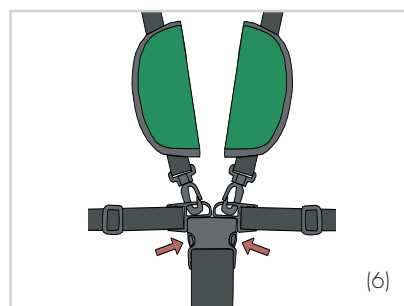

(7) The shoulder belt can be attached at three different heights in order to adjust the harness better to the size of your child.




2. Using the SWIFT

»Locking the swivel wheels:

If you are using unsurfaced paths, it may be more comfortable to lock the swivel wheels.

(8) Push the swivel wheel catch down and press the swivel wheel back until you hear a "click". The front wheels are no longer able to swivel. If you press the swivel wheel catch up, the swivel function is restored.

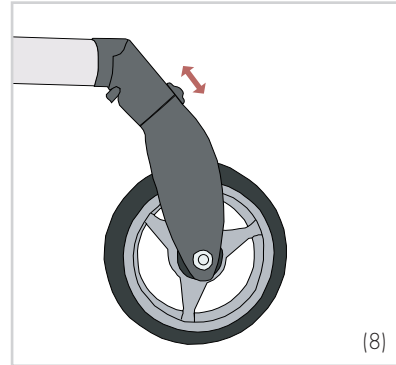

(8)


»Folding up:

(a) Fold the hood together.

(9) Press the red button and at the same time pull up the plastic lever until the strut moves upwards about 2 cm. Press the pedal on the right-hand side and at the same time press the pushing handles forwards with your hands until they are lying against the lower part of the frame.

(k) Secure the transit lock on the left-hand side.

The folded up buggy can be carried in the accompanying bag. Remove the front wheels in order to ensure that there is sufficient space for the buggy.

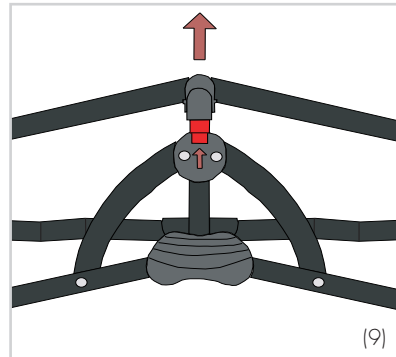

(9)


»Removing the wheels:

(10) Press in the release button and pull the front wheel out of the SWIFT chassis.

»Accessories

Footmuff

The use of other manufacturers' accessories may have an adverse effect on the way the buggy operates.

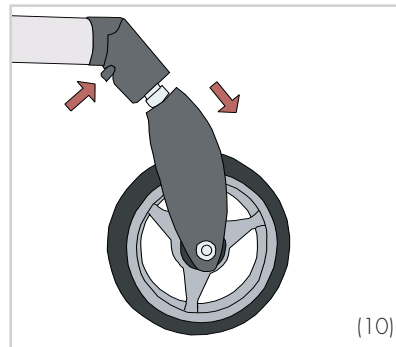

(10)

General care instructions

»Fabric components

Gesslein attach particular importance to fashion and use up-to-date materials, some of which may be more delicate than others.

All fabrics are manufactured in accordance with the Öko Tex Standard 100 certificate and satisfy the generally accepted requirements concerning freedom from harmful substances.

»Care

1. Regularly treat the fabric components of your buggy with our Magic Spray.
2. If your buggy gets wet, dab off the exterior fabric with a dry cloth to prevent moisture reaching the lining fabric through the seams (formation of water stains). Afterwards, allow the buggy to dry off with its hood up in a dry, well-ventilated room. **CAUTION!** Do not dry it in the sun!
3. Only ever park the buggy in the shade for longer periods.

Synthetic fibres present better colourfastness values than the natural cotton fibres which are pleasant to the touch. Cotton fabric fades more quickly and can be damaged much more easily. With normal use a fabric with a colourfastness value of 4 slightly is subject to slight change in colour but can withstand 200 hours' radiation from a Xenon lamp (as a substitute for daylight). After this the colour changes relatively quickly

We guarantee the following colourfastness values:

Fabric	Colour fastness value	Abrasion resistance value dry	Abrasion resistance value wet
Cotton light colours	4	3	3
Cotton dark colours	4	3	2
Polyamide	5	4	3
Polyester all colours	5	4	3

»Washing

Our covering fabrics comply with clothing standards and, like articles of high quality clothing, do not last for an indefinite period.

1. Light soiling

Clean the area in question carefully using a damp cloth and clean water. Refrain from vigorous rubbing / scrubbing and then dry with a hairdryer.

2. Heavy soiling

- Machine wash the fabric components at 30°C (delicates wash cycle) using only mild detergents that do not contain brightening agents or chlorine.
- Always use a delicates bag with dark-coloured fabrics (prevents stonewashed effect).
- Do not use a drier. Avoid strong sunlight and intense heat. Do not iron.
- Extend the fabric and dry in a well-ventilated, dry room.

- **CAUTION!** Detergents which contain chlorine, excessive detergent or additives such as fabric softener damage your fabrics and accelerate the fading of colours.

General care instructions

3. Procedure

- Remove the hood from the buggy seat and unbutton the seat
- Unscrew the hood support and remove rod

Please make a note of the correct assembly before washing

(1 = coarse adjustment 2 = fine adjustment)

- Remove playbar covering
- Extension. Not washable!

You should avoid the following:

- Knocking the pram against sharp edges during transport (such as hallways or car boots etc.)
- Exposure to intense sunlight (especially through windows, particularly car windows)
- Exposure to sunlight while wet (bleaches all fabrics - magnifying glass effect)
- Unnecessary exposure to blazing sunlight
- Contact with handcream or similar preparations (removes colour by corrosive action)
- High altitudes in mountain areas during warnings of holes in the ozone layer (the properties of the fabric are altered)

No grounds for complaint:

- Pulled threads in the case of fabrics which are clearly woven
- Rough patches or abrasions in areas subject to heavy use (e.g. in the areas of the feet)
- Pilling and fuzzing. (this can be remedied by using a clothes brush or lint remover just as you do with woollen pullovers)
- Water staining as a result of cleaning or wet weather
- Colours running during washing
- Colours fading in strong sunlight

- Variations in colour between the different prefabricated components (accessories should always be ordered with the buggy).

»Care of the buggy

Regular care and maintenance contribute to the safety and maintaining the value of the buggy. Our chassis complies with the German Industrial Standard (DIN) for children's prams and is tested accordingly.

»Monthly maintenance check

- Clean and lubricate the axles
- Use Magic Spray (or possibly silicon or teflon spray) on moving parts
- Check the air pressure of pneumatic tyres
- Adjust the self-locking screws on the hood
- Inspect all screws and tighten as necessary
- Inspect the wheel bushes and exchange as necessary

»General care

• As a result of use and external influences the lubricating film between two moving parts may no longer be present. In such cases it is imperative to treat the relevant area with a suitable lubricant. Failure to do so will lead to a considerable increase in wear and tear in the areas in question.

- Use penetrating oil for places that are difficult to reach. This may only be necessary for the suspension.

CAUTION! Not all lubricants are suitable for plastic. Please, always read through the relevant instructions for use.

General care instructions

- If the buggy gets wet, rub all metal parts with a dry cloth.
 - It is imperative to clean all metal parts and wheels immediately after outings near the sea or involving contact with de-icing salt.
 - Regularly check the hood fixing bolts. The self-locking bolts must sit well and move as a whole. Adjust by using a back stop and a Phillips screwdriver. The hood bolts must be renewed regularly.
 - Regularly protect all painted and metal components with wax (e.g. paint protection preparations, finishing polish, protective wax obtainable from car retailers) or Magic Spray.
 - Immediately touch up damage to paintwork in order to avoid the onset of rust. If patches of rust are already present, first remove them with fine abrasive paper. In cases of minor damage it is possible to carry out repairs with our maintenance kit obtainable from specialist retailers. More extensive damage can be repaired with an aerosol can (DIY store or specialist paint dealer).
 - **Thoroughly clean** chrome parts, nickel-plated parts and parts which are not easily accessible during painting, such as welded joints and other connections and **protect them with our Magic Spray**.
 - As a result of damp weather conditions flecks of rust may collect on all chrome parts. These should simply be removed with a chrome cleaner and do not represent a reduction of the quality of the product. The chrome parts must be treated and maintained with a chrome cleaner at regular intervals.
- Before using the buggy you must check the tyre pressure and if necessary pump up the tyres with a handpump
 - The rims must be regularly cleaned and metal rims must be protected against rusting and tarnishing with our Magic Spray.
 - Worn wheels are the natural result of wear and tear.
 - Bushes must be replaced as necessary since they are also components subject to wear and tear - otherwise safety cannot be guaranteed.
 - Regularly clean the wheels and axles and remove sand and dust from the mountings

»Plastic components

- • The plastic components are made of high-quality thermoplastic materials and are effective within the load limits prescribed by the German Industrial Standard (DIN) of up to 15 kg. Clean with mild soap suds when necessary.

You should avoid:

- Knocking the buggy against sharp edges during transport (such as hallways or car boots etc.).
- Jarring wheels and axles, in order to prevent distortion.
- **CAUTION!** During extremely hot weather the temperature in the car boot or in the car itself can reach 50 – 60°C. Consequently, the plastic parts become softer and may warp as a result of pressure. Therefore avoid extreme overloading during extremely hot weather. Tyres and wheels may become dented or warp.
- **CAUTION!** As a result of the materials used in the wheels permanent tyre marks may be left on certain surfaces such as parquet flooring, laminated flooring or carpeting.

»Pneumatic / sealed chamber tyres

- When you notice that there is a hole in the inner tube you can patch it yourself or have it patched by a specialist bicycle dealer in the same way as you would deal with a bicycle inner tube. Inner tubes are obtainable from any specialist pram dealer or bicycle shop.

General care instructions

No reasons for complaints:

- Pram wheels cannot be balanced. An oscillation or “wobble” of the wheels does not impair the handling characteristics. However, this can be **partially corrected by gently heating**. If this should not be effective, please **let the air out of the tyre in question and pump it up again**. In this way you can correct the irregularities of the inner tube that arise during production.
- Tolerances between the wheels and axle frames is also normal.
- **CAUTION!** Environmental influences, atmospheric saline content in coastal regions, de-icing salt, acid rain, atmospheric pollution as well as incorrect storage all promote corrosion.
- The chassis of a child’s pram is similar to a car insofar as it is a utility object. For this reason, damage to the paintwork, such as scratch marks, is unavoidable in the long term.
- Worn-out wheels

Warranty / supply agreement

»TWO-YEAR WARRANTY

Your warranty rights on this product last for two years. The warranty period begins when the product is handed over by your dealer. As proof of this, please retain for the duration of the warranty period the completed dealer's delivery certificate, the handover checklist countersigned by you, as well as the sales receipt. No claim can be processed if these documents are not presented.

WHAT IS COVERED BY THE WARRANTY?

The warranty covers all material and manufacturing defects which are present at the time of handover to the purchaser. The warranty is only valid for products to which the purchaser has not personally made alterations (e.g. the attachment of Kiddy-Boards, second seats...) The warranty is also only valid for the first owner and is non-transferable.

THE WARRANTY DOES NOT COVER:

No guarantee is undertaken for faults or damage to the purchased goods, for which we are not responsible. This applies in particular to:

- natural wear (abrasion) and damage resulting from excessive wear and tear
- subsequent defects which have arisen as a result of damage that was ignored and thus has made repairing them more difficult
- damage which has resulted from unsuitable or improper use (see instructions for use)
- damage resulting from incorrect assembly or setting-up
- damage resulting from negligent treatment or lack of care of the goods purchased
- damage resulting from improper alterations to the goods purchased

A CASE FOR WARRANTY CLAIM OR NOT?

- **Rost:** The chassis is rust-proofed in order to provide a thorough basic protection. However, patches may occur in the absence of maintenance. This is not covered by the warranty.
- **Scratches:** : Scratches appear as a result of normal wear and tear and therefore cannot be covered by the warranty.
- **Growth of mould:** Whenever textile components get damp they must be dried correctly in order to avoid the growth of mould (see instructions for use). Growth of mould cannot be covered by the warranty
- **Fading of fabrics:** We confirm that the fabrics comply with the relevant standards. The effects of solar radiation, sweat, cleaning agents, abrasion (particularly in areas subject to handling) or over-frequent washing leading to fading cannot be excluded and therefore do not constitute grounds for a claim.
- **Pilling and fuzzing of fabrics:** Pilling and fuzzing of fabrics is not covered by the warranty. This falls within the within the scope of general care of clothing and can be simply remedied with a clothes brush or fuzz remover just as you do with woollen pullovers.
- **Tearing of seams / press studs / fabric:** Please check carefully, at the time of purchase, that all fabric parts, seams and press studs have been properly stitched and attached. Any possible complaints about stitching / defective press studs must be made to your specialist dealer immediately after the defect has been identified.
- **Wheels:** Pram wheels are not balanced and may be subject to some oscillation, ("wobbling"). Worn wheels are the result of natural wear and tear. Punctures in pneumatic tyres can only result from external influences, pointed objects or use when the air pressure is too low. No claims can be accepted for this.

Warranty / supply agreement

WHAT YOU MUST BEAR IN MIND WHEN PURCHASING A PRAM

Check that the complete pram has been delivered intact and that none of the parts are missing. Check that all the functions of the pram are fully operational and confirm this on the dealer's delivery certificate.

COMPLAINTS PROCEDURE

Report the defect immediately by phone to the dealer you bought the pram from, in order to discuss subsequent procedure. No guarantee can be undertaken for faults affecting safety which are not reported to the dealer within 30 days,.

For the calculation of claims the depreciation rate relating to the specific product is applicable. Here we refer you to the published general terms of trade.

USE, CARE and MAINTENANCE

The pram is a means of transport for your child and must be cared for and maintained in accordance with the instructions for use in order that the original quality is retained.

If the SWIFT is damaged e.g. during air travel (damage in transit) have your buggy inspected or repaired by your specialist dealer before you use it again.

We expressly draw your attention to the fact that only original accessories and spare parts may be used.

Dealer's delivery certificate

Dealer:

Name: _____

Address: _____

Postcode.: _____

Town/City: _____

Telephone number (including code) _____

E-mail address: _____

Buggy model: _____

Article number: _____

Fabric – colour (design): _____

Accessories: _____

Handover checklist

1. **Completeness** checked/in order doesn't apply

2. Operational test

- Folding mechanism checked/in order doesn't apply
- Handling checked/in order doesn't apply
- Wheel check checked/in order doesn't apply
- Adjustment mechanisms check checked/in order doesn't apply
- Brake safety check checked/in order doesn't apply
- Suspension check checked/in order doesn't apply

3. Intact condition

- Chassis check checked/in order doesn't apply
- Fabric components check checked/in order doesn't apply
- Plastic components check checked/in order doesn't apply

I have examined the product and ascertained that it has been delivered intact and free of external or visible defects and that all operational functions are in full working order

The following defects were discovered and accepted:

I have received sufficient information about the product and its operation prior to purchase and have taken note of the instructions for care and maintenance

Date of purchase _____ Purchaser (Signature) _____

Retailer (Name in block capitals) _____ (Dealer's stamp)

(The purchaser's legal rights are not affected by signing this certificate of delivery to the dealer)

Registration form

The SWIFT has a warranty period of two years from the date of purchase. The warranty is only valid if the registration form has been completed in full and returned to GESSLEIN. Also make a note of the article number of your Gesslein SWIFT on the registration form. You will find the article number on the label located under the fabric at the front of the seat unit. Keep the registration form, the delivery/service checklist and your receipt in a safe place.

Unless you state explicitly that you do not wish to receive information from Gesslein about other products, we shall be happy to send you appropriate offers.

Register at **www.gesslein.de** or by fax to +49-(0)9264-995151

First name*	<input type="text"/>
Family name*	<input type="text"/>
Gender	<input type="radio"/> male <input type="radio"/> female
Address*	<input type="text"/>
Postcode*	<input type="text"/>
Town/City*	<input type="text"/>
Country*	<input type="text"/>
Telephone no.	<input type="text"/>
E-mail address	<input type="text"/>
purchased at:	<input type="text"/>
in	<input type="text"/>
Purchase date*	<input type="text"/>
Serial number*	<input type="text"/>
Colour	<input type="text"/>

* mandatory fields

